



# TUNING TABLE

Tel: 01604 592808

Fax: 01604 592818

## FIREBALL RIG TUNING GUIDE

WIND SPEED (KNOTS)	1 - 4	1 - 4	5 - 9	5 - 9	10 -15	10 - 15	16 -20	21 – UP
<b>SEA STATE</b>	FLAT WATER	CHOPPY	FLAT WATER	CHOPPY	FLAT WATER	CHOPPY		
<b>MAST RAKE</b> - Imperial	22'6"	22'8"	22'8"	22'8"	22'6"	22'6"	22'4"	22'3"
<b>RIG TENSION</b> Jib Luff. Lbs (Superspar gauge)	400	400	400	400	400	400	400	350 - 400
<b>KICKER</b>	NONE	NONE	A BIT	A BIT			LOADS	LOADS
- Reason			TOP TELL TALE SHOULD BE STALLING 30% OF THE TIME				TO CONTROL TWIST & BLADE OUT MAINSAIL	
<b>CUNNINGHAM</b>	NONE	NONE	NONE	NONE	NONE	NONE	YES	YES - LOTS
<b>JIB FAIRLEADS</b>	LOWER LINE	MIDDLE LINE	LOWER LINE	TOP LINE	MIDDLE LINE	TOP LINE	TOP LINE	TOP LINE
From c/line (mm)	250	250	250	250	250	250 - 270	275 - 300	275 - 300
<b>JIB SHEET TENSION</b>	NORMAL	EASE □"	NORMAL	NORMAL	NORMAL	NORMAL	EASE □"-□"	EASE □"- <sup>3</sup> / <sub>4</sub> "
<b>STRUT (from neutral)</b>	0	0	0	0 ~ +1/4"	0	0 ~ +1/2"	0 ~ +3/4"	- □"
<b>JIBB LUFF TENSION</b>	WRINKLES	WRINKLES	WRINKLES	WRINKLES	NO WRINKLES	NO WRINKLES	TIGHT	TIGHT
<b>CENTREBOARD POSITION</b>	FORWARD	FORWARD	FORWARD	FORWARD	UPRIGHT ~ +1"	+1 ~ 2"	2 ~ 4"	4 ~ 5"
<b>OUTHAUL</b>	TIGHT	1 □"	□"	1"	□"	□"	V.TIGHT	V.TIGHT

N. B. Mast Rake is critical, so lighter crews may have to Rake earlier (14-15 knots)