

Class: **420**


Mast: Super Spar M7

Sails: Pinnell & Bax

Crew weight (all up) 18 - 20 stone (115 -130kg)

A = SPREADER LENGTH 470mm

B = SPREADER ANGLE 165mm

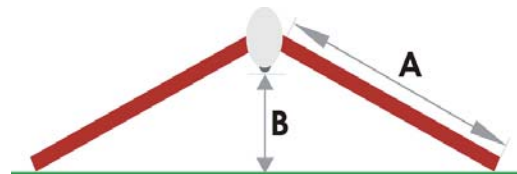

MAST RAKE: measure from top black band to gooseneck (4915/16' 1 ½") to set halyard position, then read mast rake to top of transom.

MAST FOOT POSITION: 2815 from the inside of transom to aft of mast – 110mm from the inside of bulkhead of aft mast (for new Rondar)

Mast bend: Pre- bend is measured at spreader height and should be 33mm on lightest rake setting